


The correct application of spray insulation

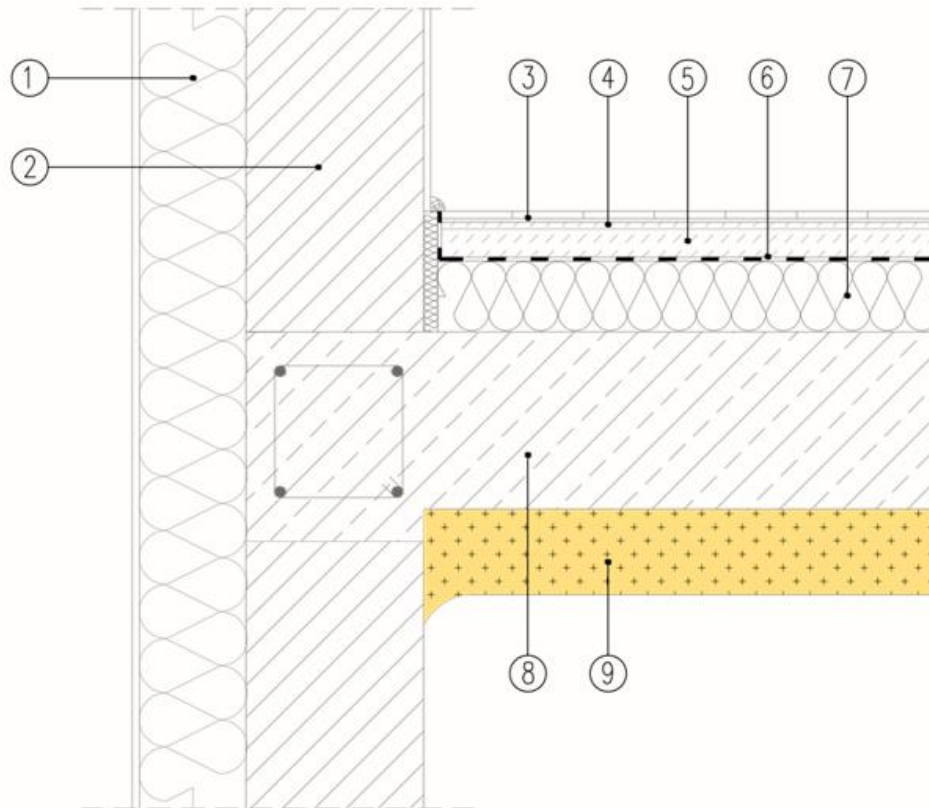

CEILING ABOVE THE BASEMENT 1:10

1. Insulation layer on the facade
2. Wall
3. Layers finishing the floor
4. Smooth cement
5. Concrete screed
6. Membrane
7. Thermal insulation layer
8. Ceiling
9. PU foam insulation