


The correct application of spray insulation

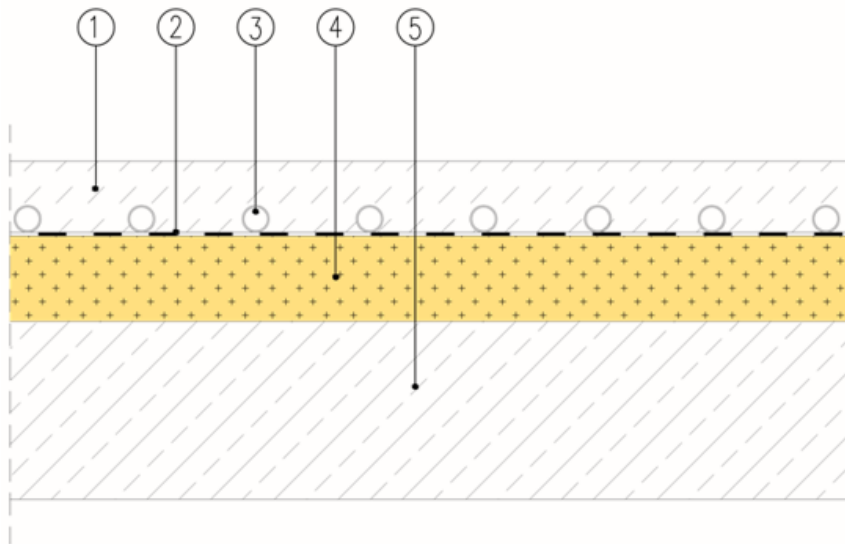

CEILING WITH UNDERFLOOR HEATING 1:10

1. Screed
2. Membrane
3. Underfloor heating
4. PU foam insulation (Purios H, HR)
5. Ceiling