


The correct application of spray insulation

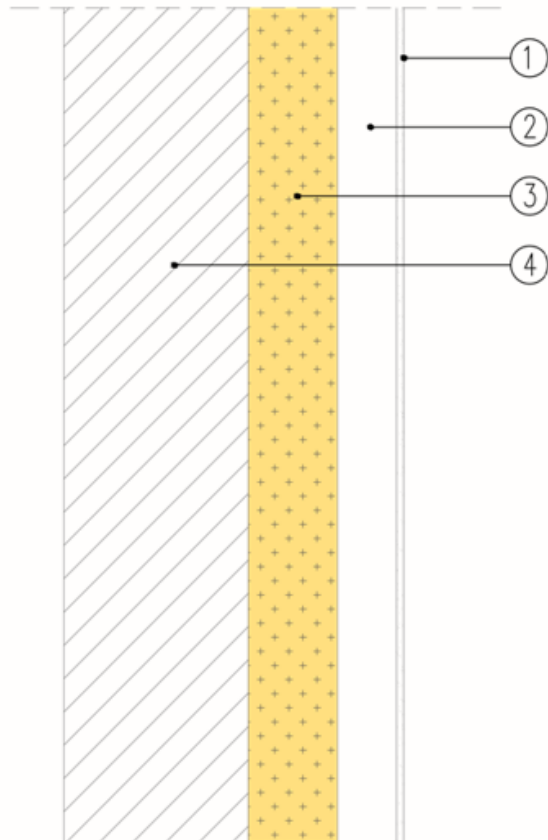

EXTERIOR WALL WITH WARMING FROM INSIDE 1:10

1. Wall made of plasterboard
2. The air layer / aluminum profile
3. PU foam insulation (Purios open-cell, Purios H)
4. Wall